

Thank you for purchasing the Headplay SE. Please watch the getting started videos on **Youtube.com/c/headplay**

Headplay SE power input

5.5V- 20.0V

Battery power:

You can power the Headplay HD with a 2S - 4S Li-Po battery. The power connector is XT60

Video input

There are three video inputs:

(AV1) 5.8GHz 40 channel integrated receiver

(AV2) DVR (if attached) or connect an external video input with the external video harness (sold separately) This cable can also used to share the battery between an external Rx and the Headplay.

HDMI IN

To cycle between video inputs press the SOURCE button. To change the channel of the 5.8GHz receiver, press the small black button. To change the band, press and hold the small black button.

The blinking letter (a,b,c,d,E) indicates the band. The number indicates channel.

- Band a: 5865, 5845, 5825, 5805, 5785, 5765, 5745, 5725
- Band b: 5733, 5752, 5771, 5790, 5809, 5828, 5847, 5866
- Band c: 5705, 5685, 5665, 5645, 5885, 5905, 5925, 5945
- Band d: 5740, 5760, 5780, 5800, 5820, 5840, 5860, 5880
- Band e: 5658, 5695, 5732, 5769, 5806, 5843, 5880, 5917

Hold the black button for 5 seconds to auto-scan.

Auto-scan automatically finds the active band and channel by quickly scanning all channels and choosing the based on highest RSSI level.

Warnings :

Holding the SOURCE button longer than 5 seconds will access the factory menu. This menu can be used to adjust advanced settings like overscan. Do NOT toggle the “burn” mode, as this will lock the goggles into a test mode. The only way to exit burn mode is to reflash the firmware (requires USB update cable and disassembling the goggles)

Do not rub the grooved side of the lens. If you need to wash your lens , do it with warm soapy water . Blow dry with slightly warm air or compressed air. Do not use hot air since it can deform the plastic lens.